


## GB AWM 5125/1

A. "On/Off" Button

B. "On/Off" Indication

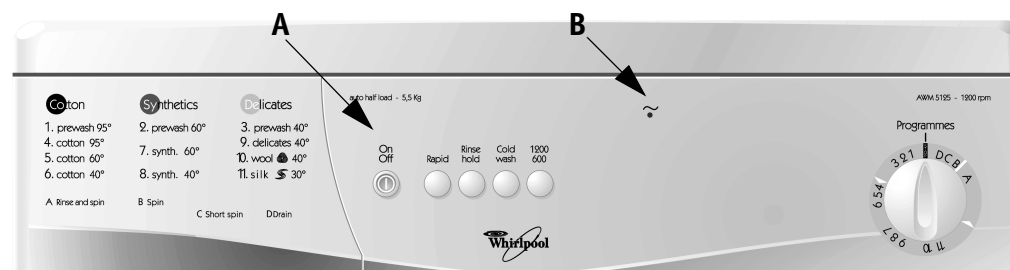

During the selected washing programme the programme selector knob moves by steps clockwise through the phases *prewash*, *main wash*, *rinse* and *spin*. Each step takes from some seconds to several minutes.

\* : optional / Yes : dosing required

- 1) For improved garment care spin speed is restricted to 900 rpm in this programme.
- 2) For improved garment care spin speed is null in this programme.

Programme	Care Labels	Type of wash/Notes	Max Load  Kg	Detergent and additives			Special options				Programme Selector
				Softener	Main Wash	Pre-wash	Rapid	Rinse Hold	Cold Wash	Spin Speed Reduction 1200 600	
Cotton 95° with prewash		Heavily soiled, long wearing and temperature stable textiles in cotton and linen (bed linen, table linen, underwear, shirts etc.).	5.5	*	Yes	Yes	—	*	*	*	<b>1</b>
Synthetics 60° with prewash		Heavily soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.5	*	Yes	Yes	—	*	*	* <sup>1)</sup>	<b>2</b>
Delicates 40° with prewash		Heavily soiled curtains and delicate clothing, dresses skirts, shirts and blouses.	1.5	*	Yes	Yes	—	*	*	* <sup>1)</sup>	<b>3</b>
Cotton 95°		Slightly to normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. <i>If you select "Rapid", washing temperature is 60°.</i>	Normal 5.5 Rapid 3.0	*	Yes	—	*	*	*	*	<b>4</b>
Cotton 60°		Slightly soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	5.5	*	Yes	—	—	*	*	*	<b>5</b>
Cotton 40°		Slightly soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	5.5	*	Yes	—	—	*	*	*	<b>6</b>
Synthetics 60°		Slightly to normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	Normal 2.5 Rapid 1.5	*	Yes	—	*	*	*	* <sup>1)</sup>	<b>7</b>
Synthetics 40°		Slightly soiled overalls and sports wear made of cotton, polyester, polyamide and blends with cotton.	2.5	*	Yes	—	—	*	*	* <sup>1)</sup>	<b>8</b>
Delicates 40°		Curtains and delicate clothing, dresses skirts, shirts and blouses.	1.5	*	Yes	—	—	*	*	* <sup>1)</sup>	<b>9</b>
Wool 40°		Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable. <i>If you select "Rinse Hold" do not leave items to soak for too long.</i>	1.0	*	Yes	—	—	*	*	* <sup>1)</sup>	<b>10</b>
Silk 30°		Textiles made of linen, silk, wool and viscose marked as "handwashable". <i>If you select "Rinse Hold" do not leave items to soak for too long. No spinning.</i>	1.0	*	Yes	—	—	*	*	—	<b>11</b> <sup>2)</sup>
Rinse and spin	—	<i>With this programme you can add starch and/or fabric softener. The programme ends with an intensive spin cycle.</i>	5.5	*	—	—	—	*	—	*	<b>A</b>
Spin	—	<i>In this programme spinning is intensive. Same as the spin cycle in the "Cotton" programme.</i>	5.5	—	—	—	—	—	—	*	<b>B</b>
Short spin	—	<i>In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme.</i>	1.5	—	—	—	—	—	—	* <sup>1)</sup>	<b>C</b>
Drain	—	<i>Drain only - no spinning. Alternative method of terminating programme the synthetic, delicate and wool programme and for premature removal of the laundry.</i>	—	—	—	—	—	—	—	—	<b>D</b>

Whirlpool is a registered trademark of Whirlpool USA.

**5019 301 05179**

**CONSUMPTION DATA**

Programme	Load (kg)	Water (l)	Energy (kWh)	Approx. Programme Duration (hours:minutes)
Cotton 95°	5.5	51	2.00	2:15
Cotton 60°	5.5	47	1.04	2:25
Cotton 40°	5.5	47	0.65	2:15
Synthetics 60°	2.5	55	0.80	1:25
Synthetics 40°	2.5	50	0.60	0:50
Delicates 40°	1.5	50	0.50	0:45
Wool 40°	1.0	50	0.50	0:40
Silk 40°	1.0	37	0.40	0:40

Prewash cycle increases programme duration approximately 15 min. Consumption values were measured in normalized conditions in compliance with Standard IEC 60 456.  
Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.

**ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME**

Add the detergent as described in the programme table or in the chapter "Detergents and Additives" in the booklet.

1. Open the tap.
2. Set the **programme selector** to the desired programme.
3. **Special options** can be selected.
4. Check that the door is well closed and turn on the washing machine by pressing the **"ON/OFF"** button. The indicator lights up, indicating that the washing machine is on.

**SELECT ANY DESIRED OPTION****"Rapid Wash" button**

- For quick, economical washes.
- Ideal for minimum loads of lightly-soiled articles.

**Note:** reduce the detergents quantity.

**"Rinse Hold" button**

- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.
- This option is particularly recommended for the programme "Synthetics" or "Delicates".
- This function is particularly useful if you want to postpone spinning to a later time, or if you want to drain only.

**Terminate the "Rinse Hold" option:**

- Press the "Rinse Hold" button again; the programme will terminate automatically with the final spin cycle for the present wash programme.

If you do not wish to spin the clothes, turn the programme selector knob to the "Drain" programme.

**"Cold Wash" button**

- With this option water is heated only up to 20°C.

**"Spin Speed Reduction" button**

- Reduces the predetermined automatic maximum spin speed.  
In some programmes the maximum final spin speed is limited to go easy on your laundry items. Selection of a higher spin speed is not possible.

**PROGRAMME CHANGE**

To reselect a programme when a cycle has already begun:

1. Switch off the appliance by pressing the **"ON/OFF"** button.
2. Select the new programme.
3. Start the programme by pressing the **"ON/OFF"** button.

**PROGRAMME END**

1. At the end of the programme the programme selector moves to the stop position.
2. To unload the machine wait for the door to unlock (about 1 minute).
3. Switch off the appliance, open the door and take out the laundry.
4. Close the tap and leave the door ajar to allow the drum to dry out.

**NOTES AND INDICATIONS FOR USE**

- **WATER LEVEL**  
It may not be visible as the cycle is optimised for a minimum water consumption without compromising washing results.
- **SPIN SPEED CONTROL**  
Spin speed may be reduced automatically or may even be excluded in the case of small loads with highly absorbent garments (e.g. bathrobes, bathmat).  
This control avoids cloth and machine damage and excessive vibrations and consequent noise produced by the machine due to load unbalance: by selecting high spin speeds the noise level increases.
- **MOTOR NOISE**  
The running noises of the new, electronically-controlled motor are not the same as the ones you are used to from your old appliance. Don't be surprised - modern technology has a modern sound.
- **CLEANING THE FILTER**  
To ensure an impeccable function of the pump, check the filter regular and clean it if necessary.